



TELLTIME · SWISS WORD CLOUD CLOCK

MOUNTING INSTRUCTIONS

MODEL GRAIN · WALL MOUNTING

Document TT-GRAIN-MI-EN · Version 1.0 · Issued July 2026

Applies to all GRAIN variants · Mounting time approx. 15 minutes

Enclosed: **drilling template** 1:1 (separate sheet, document TT-GRAIN-DT)



TELLTIME +

HANDCRAFTED IN MATZENDORF · SWITZERLAND

1 BEFORE YOU DRILL

⚠ IMPORTANT SAFETY NOTES

- **Locate cables and pipes:** Check the drilling spot with a detector for electrical, water and gas lines. Above and below sockets/switches, lines usually run vertically.
- **Load capacity:** The clock weighs approx. **3.8 kg**. The wall, plug and screw must safely bear this weight permanently. If in doubt, consult a professional.
- **Work in pairs:** A second person helps with hanging and aligning.
- Wear safety glasses when drilling; do not inhale drilling dust.

WHAT YOU NEED (TOOLS)

- Drill / hammer drill (depending on wall)
- Masonry bit Ø 6 mm (for concrete/brick)
- Screwdriver PH2 / bits
- Spirit level
- Pencil, tape
- Cable detector (recommended)

WHAT'S INCLUDED

- Wall bracket
- Retaining screw with wall plug (Ø 6 mm)
- Drilling template 1:1 (sheet TT-GRAIN-DT)
- White USB-C textile cable, 2 m
- USB power adapter 5 V

THE RIGHT PLUG FOR YOUR WALL

WALL TYPE	FIXING	NOTE
Concrete / solid brick	Supplied nylon plug Ø 6 mm + retaining screw	Standard case — bit Ø 6 mm, hole depth approx. 45 mm
Hollow brick / aerated concrete	Special/universal plug Ø 6–8 mm	Drill without hammer action so the webs don't break out
Plasterboard / stud wall	Cavity plug (metal) or plasterboard plug, load ≥ 10 kg	The supplied plug is not suitable for this
Solid wood / joist	Retaining screw directly, pilot hole Ø 3 mm	No plug needed

THE RIGHT SPOT

- **Height:** The clock looks best with its centre at eye level — approx. 1.50–1.65 m from the floor.
- **Socket:** The textile cable is 2 m long — plan the route to the socket.
- **Light:** Avoid prolonged direct sunlight (wood may darken/fade); the light sensor regulates brightness most beautifully in natural room light.
- **Clearance:** At least 5 cm free space all around for air circulation and to remove the magnetic front.

2 MOUNTING IN FIVE STEPS

1

ALIGN THE TEMPLATE

Tape the **drilling template** (sheet TT-GRAIN-DT) to the desired position. The «TOP EDGE OF CLOCK» line shows where the clock ends at the top. Align the template exactly horizontal with the spirit level.

2

DRILL & PLUG

Drill at the marked point (Ø 6 mm, approx. 45 mm deep — depending on wall type, page 2). Remove the template and insert the plug flush.

3

FIT THE WALL BRACKET

Screw the **wall bracket** tight with the retaining screw. The bracket must sit flat and firm against the wall — it carries the entire weight of the clock.

4

HANG THE CLOCK

Hang the clock onto the wall bracket using the rear mount and check with a gentle downward pull that it sits securely. Fine-align it at the top edge with the spirit level — the mount allows slight sideways adjustment.

5

CONNECT THE CABLE

Plug the textile cable into the USB-C port on the back, route it vertically down to the socket and connect it to the supplied power adapter. The clock starts automatically.



Mounting sequence — see steps above and drilling template TT-GRAIN-DT for details


DIMENSION REFERENCE

The hanging point is **110 mm below the top edge** of the clock, horizontally centred. To place the **clock's centre** at a specific height (e.g. 1.60 m), drill at: desired centre height + **80 mm** (example: 1.60 m + 8 cm = drill hole at 1.68 m).

3 FITTING & REMOVING THE MAGNETIC FRONT

The solid-wood front is held on the body magnetically — completely tool-free:

- **Fitting:** Hold the front by its outer edges with both hands and bring it close — the magnets pull it into the exact position by themselves.
- **Removing:** Grip the edges with both hands and pull straight forward. Do not tilt or lever.
- Always lay the front **flat on a soft surface** (visible side up) — never stand it on its edge.

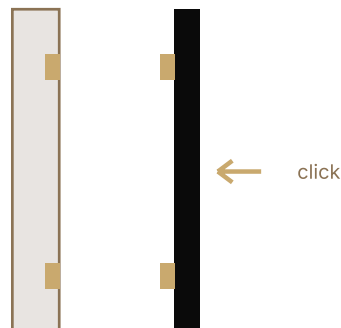

Magnets centre the front by themselves

⚠ STRONG MAGNETS

Keep away from pacemakers, credit/magnetic cards and sensitive devices. When fitting, keep fingers out from between the front and the body.

4 FINAL CHECKLIST

- ☐ Clock hangs securely (pull test) and level (spirit level on the top edge)
- ☐ Cable hangs without tension, no trip hazard, plug fully seated
- ☐ Clock shows the time within seconds of plugging in
- ☐ Magnetic front sits flush, all four corners contact
- ☐ Min. 5 cm clearance all around; no prolonged direct sunlight
- ☐ Wi-Fi set up? → Operating Manual, section 4

REMOVAL / RELOCATION

Unplug, remove the cable, take off the magnetic front and cushion it separately, lift the body upward off the wall bracket. For transport, ideally keep the original packaging.

QUESTIONS ABOUT MOUNTING?

Telltime GmbH · Dorfstrasse 40 · CH-4713 Matzendorf · info@telltime.swiss · www.telltime.swiss